



SPOTCLEAN™ MINI

PORTABLE CARPET AND UPHOLSTERY CLEANER


4149 SERIES

Important Safety Instructions	2
What's in the Box?.....	3
Assembly	3
Filling the Clean Water Tank.....	4
Using Your Machine.....	5
After-Cleaning Care.....	6
Storing Your Machine.....	7
Troubleshooting.....	7
Limited Warranty	8



Product Overview

- A. Clean Water Tank
- B. Power Button
- C. Dirty Water Tank
- D. Flex Hose
- E. Hose Clip

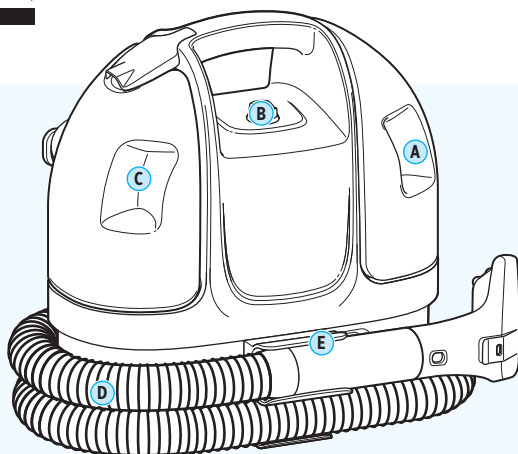

SYMBOL	EXPLANATION
	Caution.
	Read operator's manual.
	Risk of fire.
	Risk of electric shock.
	Do not expose to rain.
	Store indoors.
	Do not overwet carpet. Use only on carpet moistened by the cleaning process.
	Use only BISSELL® cleaning formulas intended for use with this machine.
	Disconnect power before servicing.

SYMBOL	EXPLANATION
	This symbol on the product and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points. Please contact your local authority for further details of your nearest designated collection point.
	Allow parts to dry.
	Use warm water, temperature up to 60°C.
	Check the manufacturer's tag before cleaning textile. "W" on the tag as shown means you can use your cleaner.
	Lock.
	Do not freeze.
	Paper
	Warning: Slippery surface.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- A hazard may occur if the appliance runs over the supply cord.
- The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- Floor slippery when wet.
- Liquid must not be directed toward equipment containing electrical components.
- Use only the type and amount of liquids specified under the operations section of this guide.
- Always connect to a properly earthed electrical socket. Do not modify earthed plug.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
- Do not expose to rain. Store indoors.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not pull or carry by cable, use cable as a handle, close door

on cable, or pull cable around sharp edges or corners. Do not run appliance over cable. Keep cord away from heated surfaces.

- Do not unplug by pulling on cable. To unplug, grasp the plug, not the cable.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Turn OFF all controls before plugging or unplugging appliance.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters in place.
- Do not turn your appliance ON until you are familiar with all instructions and operating procedures.
- Do not leave steam cleaner unattended.
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.

SAVE THESE INSTRUCTIONS

ORIGINAL INSTRUCTIONS.


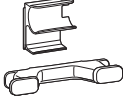
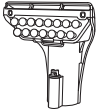

FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY.

THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.

IMPORTANT INFORMATION






- To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.
- When finished using the product, wrap cord around cord wrap for storage. Store unit indoors in a dry location in an area where the product is not likely to get damaged.
- Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.

What's in the Box?

			
Machine	Hose Clip and Cord Bracket	10cm Tough Stain Tool	Trial Cleaning Solution

Assembly

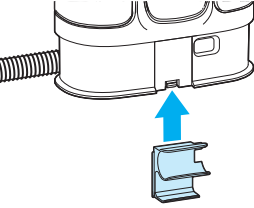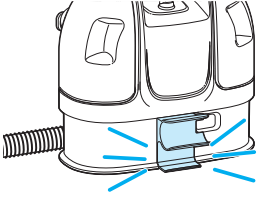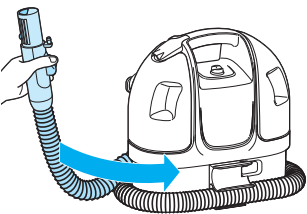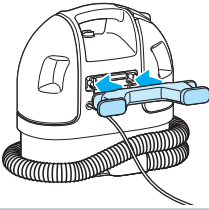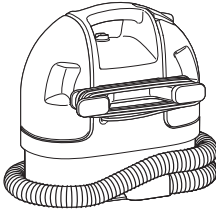

 <p>1. Slide the hose clip into the opening on the front of the machine.</p>	 <p>2. Push the hose clip until it clicks into place.</p>	 <p>3. Wrap flex hose around machine and place hose grip into bracket.</p>
 <p>4. Line up the cord bracket with the holes of similar shape on the back of the machine. Push in to secure onto the machine.</p>	 <p>5. Wrap cord around cord bracket.</p>	


Filling the Clean Water Tank




For optimal performance, use genuine BISSELL® cleaning solution in your machine. Other cleaning solutions or household cleaners may cause defects or damage to the machine.




1. Choose your cleaning solution.* global.bissell.com for cleaning solutions.

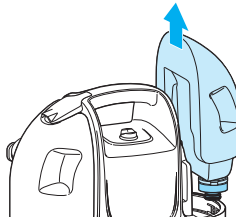


2. Remove clean water tank by lifting straight up and away from the machine.

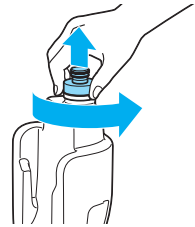


3. Unscrew cap at bottom of tank.

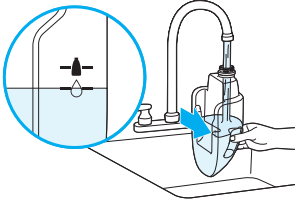


4. Fill with warm (60°C MAX) tap water to water line. Do not use boiling water. Do not heat water in the microwave.

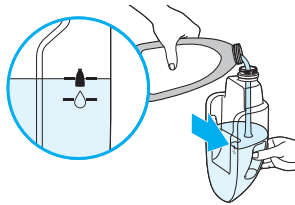

5. Add BISSELL cleaning solution to the cleaning solution line.

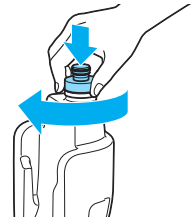

6. Place cap back on to tank and screw into place until secure.

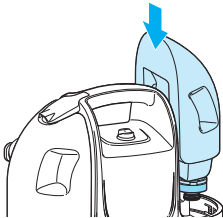


7. Slide tank down until it clicks into place.


***Compatible BISSELL cleaning solutions include:** Spot & Stain Pro Oxy, Spot & Stain Pet Pro Oxy, Natural Pet Spot & Stain, SpotClean Pro Oxy

****Machine may be used without cleaning solution; however, BISSELL recommends using only distilled water to prevent hard water buildup and prolong the life of your machine.**


Using Your Machine

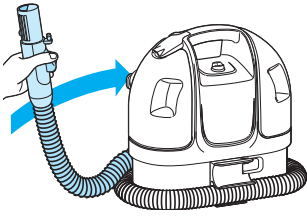


1. Release flex hose from hose clip and unwrap from machine.

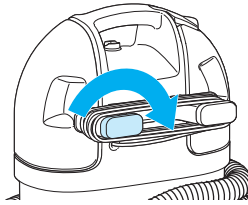


2. Twist quick release tabs on the cord bracket to remove cord.

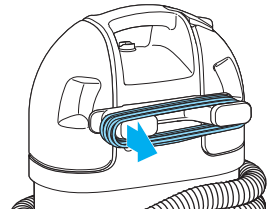

 
3. Remove cord.

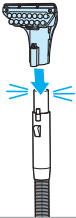

4. Attach desired tool to hose until it clicks.

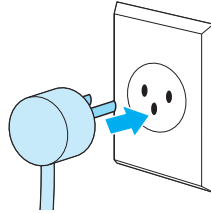


5. Plug cord into outlet.

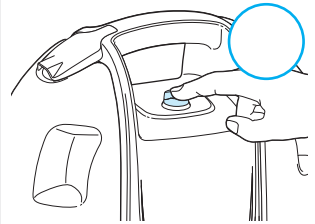


6. Turn machine on.




7. While holding tool above desired area, press and hold trigger to spray solution.

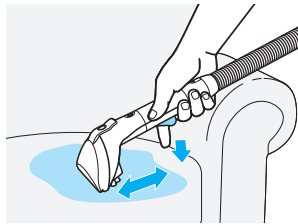


8. Release spray trigger and gently scrub stain using bristles.

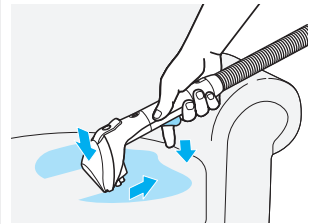

9. With trigger released, press tool firmly against surface and pull towards you to remove stain. Repeat as needed.

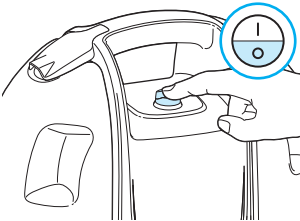

10. Turn machine off.

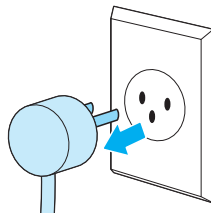

11. Unplug the cord from the outlet.


Emptying the Dirty Water Tank

<p>1. Empty dirty water tank when “MAX” fill line is reached. Do not allow water level to exceed MAX fill line.</p>	<p>2. To remove the dirty water tank, lift up tank release latch and remove the tank from the machine.</p>	<p>3. Empty dirty water tank. Rinse tank with warm water and place tank back onto machine. Lower tank release latch into place.</p>

Cleaning the Tool

<p>1. To disconnect tools, push down on button above hose grip and pull straight off. Do NOT twist tool to remove it.</p>	<p>2. Remove tool lens by pulling tab upward.</p>	<p>3. Rinse lens and tool with warm water. Allow to dry before reinstalling.</p>

Storing Your Machine

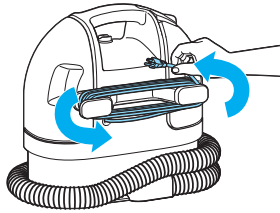

When finished using the machine, wrap cord around cord wrap for storage. Store machine indoors in a dry location in an area where the product is not likely to get damaged.

Troubleshooting

Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.global.bissell.com.

Problem	Possible Cause	Remedies
Reduced spray or no spray	Spray nozzle clogged.	Clean spray nozzle.
	Clean water tank empty.	Refill tank.
	Clean water tank insert clogged.	Clean insert at bottom of tank.
	Pump needs priming.	Reseat clean water tank and hold spray trigger to allow machine to prime.
	Clean water tank damage.	Order replacement clean water tank.
	Clean water tank valve stuck.	Use a small tool or utensil to free valve on clean water tank cap.
Machine won't pick up cleaning solution	Tank release latch is not closed properly.	Lift up the tank release latch and press down firmly to make sure it is in place.
	Poor tool position.	Reposition tool on surface. Ensure nozzle on tool is making contact with surface for optimal suction.
	Dirty water tank is full.	Empty tank.
	Tool is damaged.	Replace with new tool.
	Excess solution in flex hose.	Lift tool and point upwards to allow water in hose to flow into the dirty water tank.
	Incorrect cleaning solution.	Only use BISSELL® portable machine cleaning solutions (with BISSELL Boost if desired).
	Hose is damaged.	Contact BISSELL Consumer Care.
	Dirty water tank is damaged.	Order replacement dirty water tank.
Leaking	Dirty water tank is damaged.	Order replacement dirty water tank.
	Clean water tank is damaged.	Order replacement clean water tank.
	Dirty water tank is full.	Empty dirty water tank.
	Clean water tank cap is damaged or improperly installed.	Ensure clean water tank cap is not stuck or allowing water to flow freely. Ensure cap is securely tightened onto tank.

Limited Warranty

This limited warranty is provided by BISSELL® International Trading Company B.V. ("BISSELL") and applies in Australia and New Zealand. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under The Australian Consumer Law or New Zealand Consumer Laws, whichever applies to you. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this warranty will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor. This warranty is given to the current owner of the product with the original sales receipt. The original sales receipt must include the product(s) purchased, the date purchased, and which country it was purchased from new. You must be able to evidence the date of purchase and show the product was purchased in Australia or New Zealand to submit a claim under this warranty. You will receive the warranty that is applicable to the country where your product was originally purchased, as shown on the original sales receipt. If you use the product outside of the country where it was purchased, your warranty may be void in BISSELL's sole discretion. It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill the terms of this warranty. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found at global.BISSELL.com/privacy-policy.

Limited Two-Year Warranty

For two years from the date of purchase by the original purchaser, subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part or product. BISSELL recommends that the original packaging and original proof of purchase with the date of purchase and country where purchased be kept for the duration of the warranty period in case you want to redeem the warranty during the warranty period. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the warranty. If your product is replaced by BISSELL under this warranty, then the new item will benefit from the remainder of the term of this warranty (calculated from the date of the original purchase). The period of this warranty shall not be extended whether or not your product is repaired or replaced.

*Conditions of Warranty

This warranty applies to products used for personal domestic use and not commercial or hire purposes. Consumable components and attachments such as filters, belts, shells, water tanks, scraping strips, brushes, and mop pads, which

must be replaced or serviced by the user from time to time, are not covered by this warranty. This warranty does not apply to any defect arising from fair wear and tear, including but not limited to the battery discharging time shortening due to the aging or use. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the user guide is not covered by this warranty. An unauthorised repair (or attempted repair) may void this warranty whether or not damage has been caused by that repair/attempt. Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this warranty. Except as set out below, BISSELL and its distributors are not liable for any loss or damage that is not foreseeable or for incidental or consequential damages of any nature associated with the use of this product including without limitation loss of profit, loss of business, business interruption, loss of opportunity, distress, inconvenience, or disappointment. Except as set out below, BISSELL's liability will not exceed the purchase price of the product. BISSELL does not exclude or limit in any way its liability for (a) death or personal injury caused by our negligence or the negligence of our employees, agents or subcontractors; (b) fraud or fraudulent misrepresentation; (c) or for any other matter which cannot be excluded or limited under law. To make a claim under this warranty contact BISSELL Australia PTY LTD (details below). Contact BISSELL prior to returning any goods. Where agreed, BISSELL will reimburse reasonable postage / handling costs (if any) for returning goods to BISSELL. To claim expenses incurred in making a claim under this warranty please provide BISSELL with a copy of the receipt of the expenses by email or post. For Australian Consumers Only: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Important Notes

Please keep your original sales receipt. It provides proof of the date of purchase and where it was purchased in the event of a warranty claim. See warranty for details. Please note that using your BISSELL machine outside of its country of original purchase and/or use with a power converter may damage your BISSELL machine and damage caused by mismatched power voltage will not be covered by your warranty. Please note that putting vinegar, bleach, dish soap, detergent, homemade soap, and other non-BISSELL products in your BISSELL machine may damage your BISSELL machine. Damage caused by using non-BISSELL products in your machine will not be covered by your warranty.



Australia

Telephone: 1300 247 735
Website: BISSELL.com.au
Address: 789 Springvale Road,
Mulgrave, Victoria 3170
Email: consumercareau@bissell.com



New Zealand

Telephone: 0800 247 735
Website: BISSELL.co.nz
Address: 789 Springvale Road,
Mulgrave, Victoria 3170
Email: consumercaresnz@bissell.com

