

# Cleanview Passive

## 1994F

### Blowing Dust

- 1) Locate post-motor filter on back of vacuum. Press down on filter door tab to remove door.



- 2) Clear away any debris build up on and around filter. Reattach filter door.
- 3) Remove dirt tank by pressing release button and lifting tank away from machine.



- 4) Over a trash bin, press empty latch on back of tank to empty tank. Snap shut bottom lid.
- 5) Separate top handle from bottom tank by grasping carry handle and base of dirt tank. Twist the carry handle counterclockwise.



- 6) Grasp filter handle and lift it out of dirt tank.
- 7) To separate filter pieces, twist filter handle counterclockwise while grasping base of outer cyclone.
- 8) Next, twist filter handle counterclockwise while grasping base of inner cyclone. Clear away any debris build up. Wash pieces if necessary.

**NOTE:** DO NOT wash filter. To clean, tap on side of trash bin.




- 9) To reassemble, align tabs on filter piece with their mating slots on the inner cyclone and twist clockwise.
- 10) Do the same to connect inner and outer cyclone pieces. Reinsert pieces into dirt tank. Filter should sit level.



**NOTE:** filter will not sit level if tabs on front are not aligned



- 11) Reattach top lid to dirt tank by aligning clear notch with slot on top lid. Clear notch should point towards unlocked. Twist clockwise to lock.

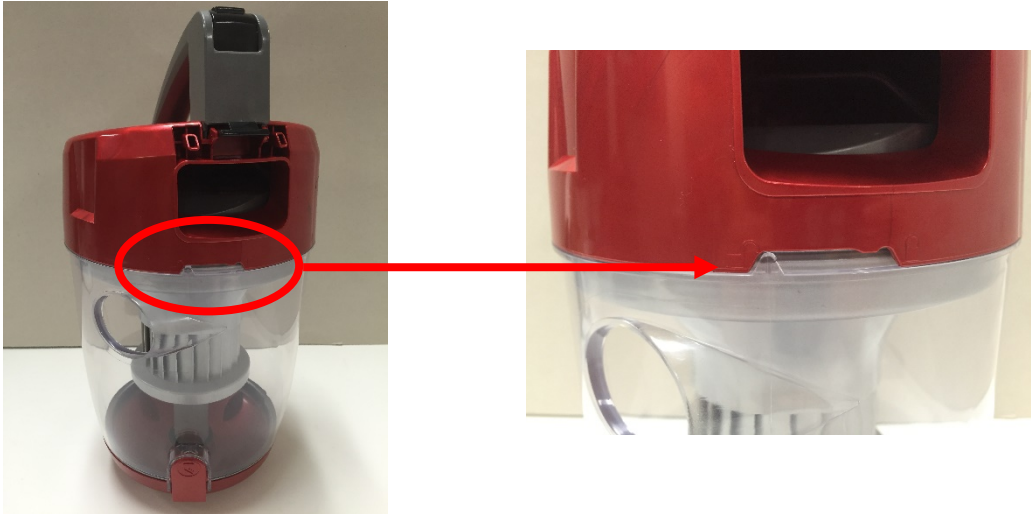

- 12) Reattach dirt tank to canister and turn on. If still blowing dust, remove hose to check for clog.

- 13) Detach hose from base of canister by pushing on release tab and pulling out.



- 14) Detach hose from extension wand by grasping each piece and pulling them apart. Do the same to detach the foot.



- 15) Insert broomstick through wand and hose to clear debris.

- 16) Also, inspect hose section by section for holes or cracks. If a hole or crack is found,

**BISSELL Consumer Care:** please refer to product changeover guide.

**External Support:** Contact BISSELL

- 17) Reattach pieces by inserting them into their corresponding parts.

- 18) Turn machine on. If the machine is still blowing dust,

**BISSELL Consumer Care:** please refer to product changeover guide.

**External Support:** Contact BISSELL